

FIG A


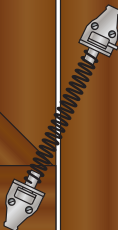


FIG B

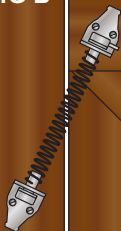

GATE RETURN SPRING

1. With gate closed, place spring on gate with fixed peg end at bottom.
2. If gate is hinged as fig A: Place bottom fixing plate on gate and top plate on post.
If gate is hinged as fig B: Place bottom fixing plate on post and top plate on gate.
3. Mark out holes for spring on gate and post.
4. Remove spring and drill pilot holes for screws into gate and post. Replace spring and fix to gate using screws provided.
5. Insert rod into hole at head and turn clockwise to set spring tension.
6. Hold rod once turned to prevent spring recoiling. Insert loose peg into opposite hole to maintain spring tension.
7. Repeat steps 5 and 6 until spring tension is adequate enough to close gate.