

Make sure hinge straps are horizontal to gate. Mark out holes for each hinge on gate.

2. Remove hinges and drill pilot holes for screws into gate. Replace hinges and fix to gate using screws provided.

3. Position gate in opening and support securely. Leave enough space between gate

3. Position gate in opening and support securely. Leave enough space between gate and post to allow gate to swing freely. Mark out holes for opposite hinge brackets on post.
4. Remove hinges and drill pilot holes for screws into post. Replace hinges and fix to post using screws provided.